


# PHONAK SKY V70 – SP TAMPERPROOF ROGER 18 INTEGRATED RECEIVER




PHONAK SKY V70 -SP TAMPERPROOF  
WITH INTEGRATED PHONAK ROGER 18  
(02) RECEIVER.

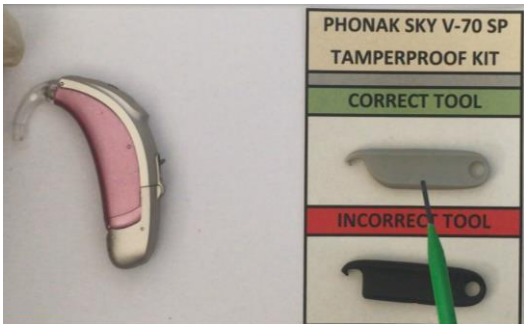

PHONAK SKY V70 -SP TAMPERPROOF  
COVER – CORRECT OPENING TOOL  
GREY.

BLACK IS INCORRECT OPENING TOOL –  
ONLY USED TO OPEN TAMPERPROOF  
BATTERY COMPARTMENT.

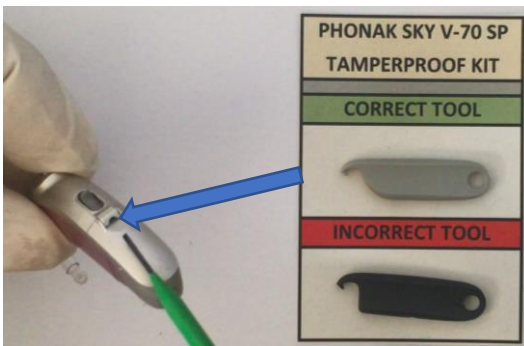

TAMPERPROOF COVER LOCKING FLAP,  
INDICATION WHERE THE CORRECT  
OPENING TOOL (GREY) IS TO BE USED.




USING THE CORRECT OPENING TOOL  
(GREY) – INSERT THE POINTED END OF  
THE GREY TOOL INTO THE SMALL  
OPENING HOLE AT THE BASE OF THE  
TAMPERPROOF COVER.



INSERT THE POINTED END OF THE GREY  
TOOL INTO THE SMALL OPENING HOLE  
AT THE BASE OF THE TAMPERPROOF  
COVER.

## PHONAK SKY V70 – SP TAMPERPROOF ROGER 18 INTEGRATED RECEIVER

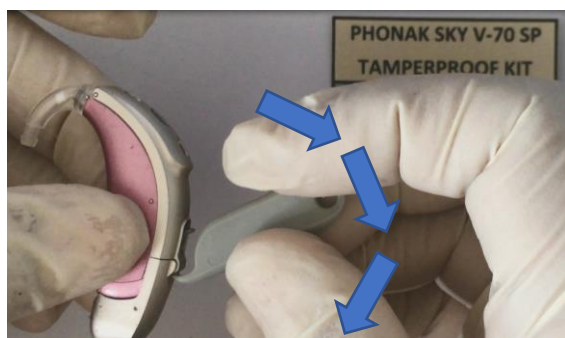

INSERT THE POINTED END OF THE GREY TOOL INTO THE SMALL OPENING HOLE AND CAREFULLY LEVER THE GREY TOOL AT THE BASE OF THE TAMPERPROOF COVER.




WITH THE POINTED END OF THE TOOL INSERTED INTO THE SMALL OPENING HOLE, CAREFULLY LEVER UNTIL THE LOCKING FLAP JUST RELEASE & DETACHED FROM THE INTEGRATED RECEIVER WITH THE BATTERY COMPARTMENT.



CAREFULLY LIFT THE TAMPERPROOF COVER AND THEN HOLD THE BASE OF THE INTEGRATED RECEIVER AND THEN OPEN THE BATTERY COMPARTMENT.



HOLD THE HOUSING OF THE HEARING AID AND THE BASE OF THE INTEGRATED RECEIVER, THEN FULLY OPEN THE BATTERY COMPARTMENT.

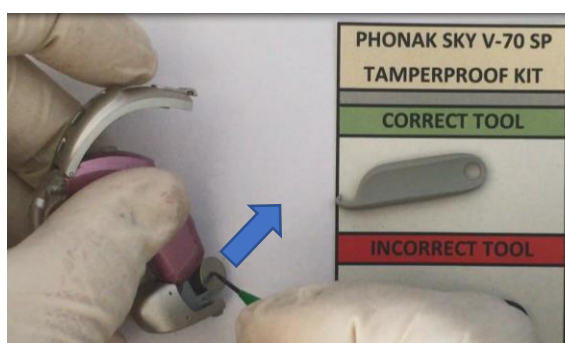

SLIDE OUT THE OLD BATTERY FROM THE BATTERY COMPARTMENT AND REPLACE IT WITH A NEW ONE, ENSURING IT IS INSERTED IN THE CORRECT WAY UP.

# PHONAK SKY V70 – SP TAMPERPROOF ROGER 18 INTEGRATED RECEIVER



CLOSE THE BATTERY COMPARTMENT CAREFULLY, UNTIL IT'S FULLY CLOSED.



CLOSE THE TAMPERPROOF COVER.



CAREFULLY PRESS THE SMALL TAB UNTIL IT CLICK INTO THE LOCKING CATCH OF THE INTEGRATED RECEIVER HOUSING.



PHONAK SKY V70-SP FITTED WITH A TAMPERPROOF ROGER 18 INTEGRATED RECEIVER.